


Identification number	Version number	Page number
001120220	1/2022	3

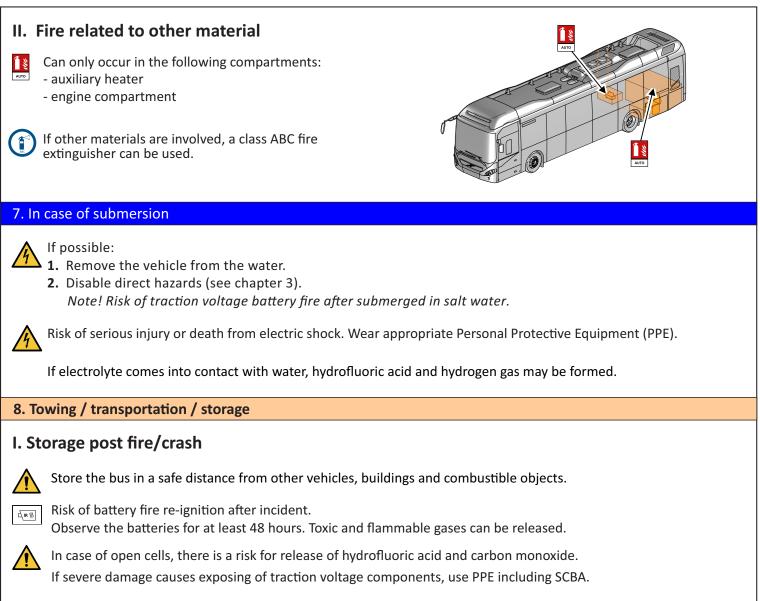

II. Towing

Towing device (A) is located on the front of the bus. Towing eyes (B) are located on the front and the rear of the bus.

Note! Secure the pin before towing (C).

Allowed methods:

1. Towing.

Note! Use only front towing eye for towing the bus with all wheels on the ground.

- 2. Lifting and towing.
- **3.** Transporting.

Note! Remove the propeller shaft from the drive axle before towing.

9. Important additional information



Do not touch or cut orange traction voltage power cables.

Do not touch or open traction voltage components.

Do not damage the battery pack, even if the propulsion system is deactivated.

Do not step on or press on damaged batteries.

Always use PPE when working on hybrid vehicle.

Identification number	Version number	Page number
001120220	1/2022	4

